

Assembly Instructions



(W x D x H) 1.00m x 1.00m x 0.72m
Product Name: Abbey Round Table

Pressure Treated products should not be treated with any other products for the first month.

PLEASE KEEP THIS INSTRUCTION

Zest4Leisure
01352 752555 option 1 – sales@zest4leisure.co.uk


Abbey Round Table Assembly Instructions

Requires 2 person assembly.

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, Spanner. 3mm Drill Bit required in order for you to drill all screw holes before construction.

Abbey Round Table Pack List		
Item	Description	Quantity
A	Leg	4
B	Table Top	1
C	Cross Bracing	2
D	Horizontal Bracing	2
E	Diagonal Bracing	4

Fixings		
	40mm Screw	13
	60mm Screws	8
	Bolts, washers & nuts	8

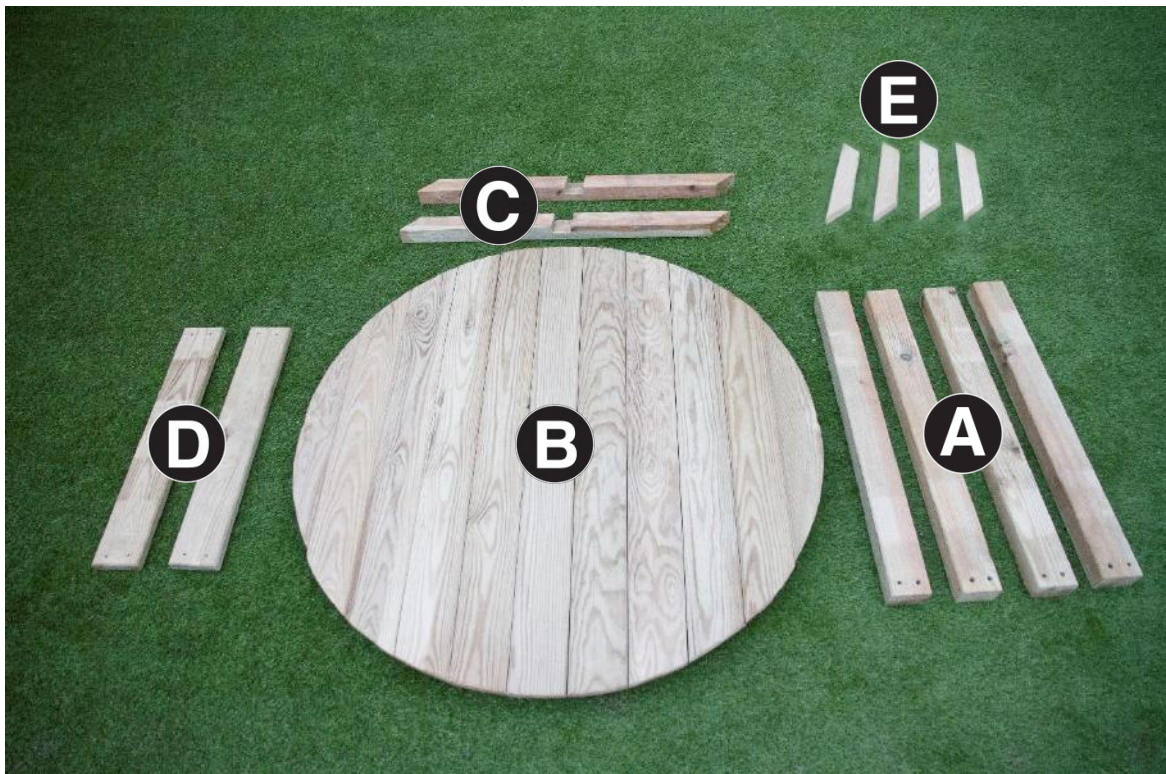

Please take a few moments to check all pack contents listed.


Assembly requires 2 persons.

Tools required: Corded/Cordless Drill, Pozi-drive Bit/Screwdriver, Spanner. 3mm Drill Bit required in order for you to drill all screw holes before construction.


1. Position Leg A (Fig.1a) and attach to Table Top B using 2no Bolts, washers & nuts (Fig.1b). Repeat procedure for the remaining Legs A.
2. Interlock Cross Bracings C (Fig.2a) and fix using 1no 40mm Screw (Fig.2b).
3. Attach Cross Bracing Assembly to legs using 1no 60mm Screw per Leg A and at a height of 350mm (nominal) (Fig.3).
4. Position Horizontal Bracing D between table top bearers and attach to Legs A using 4no 40mm Screws – 2no per leg (Fig.4). Repeat the procedure for the remaining Horizontal Bracing D on the opposite side.
5. Attach Diagonal Bracing E to Leg A using 1no 60mm Screw (Fig.5a) and to the table top bearer using 1no 40mm Screw (Fig5b). Repeat procedure for the remaining 3 LegsA and Diagonal Bracings E

Abbey Round Table is now complete.


1a

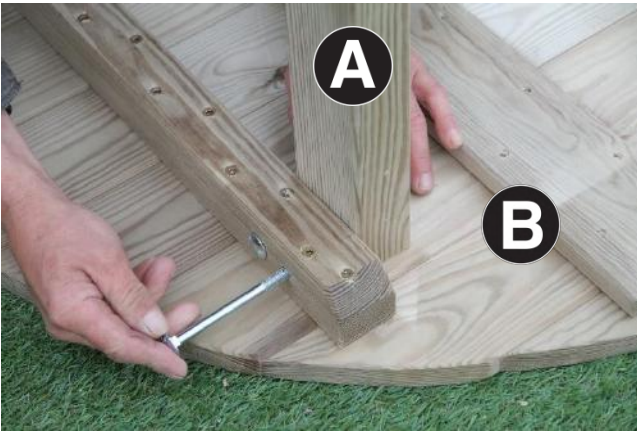

1b

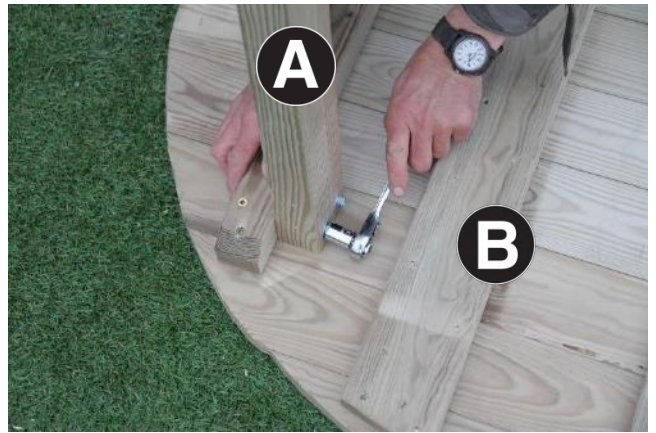

2a

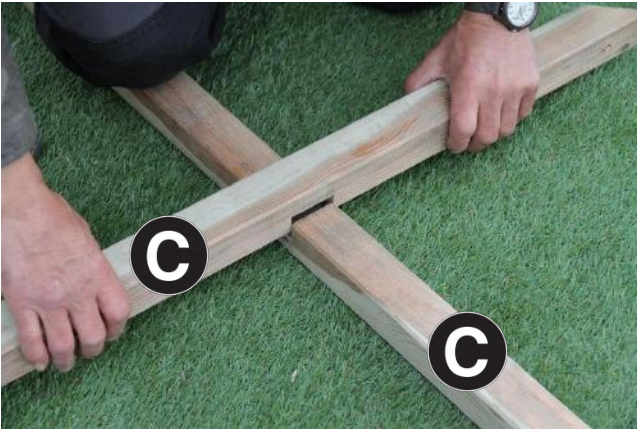


2b




3



4

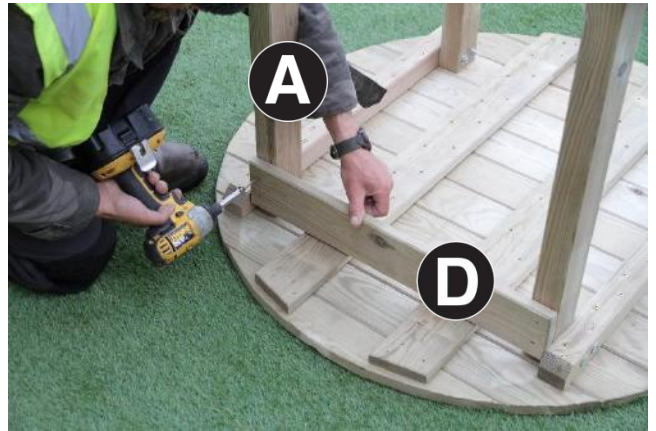

5a

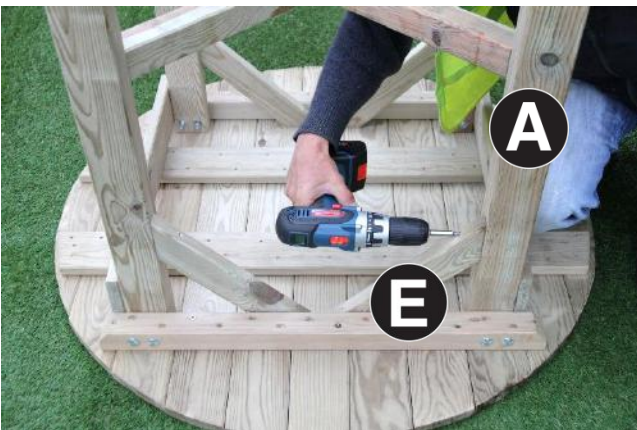

5b

